



USE		
AD wood (Air-dried)	KD wood (Kiln-dried)	Composite boards
●		

HIDDEN FASTENING SYSTEM FOR AD WOOD DECK BOARDS

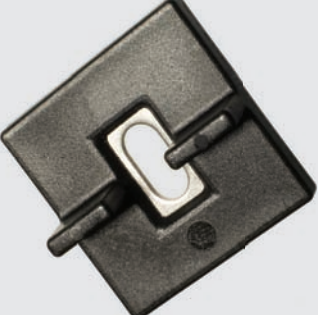


Features


- Fastening by screwing boards down onto joists.
- SPAX® self-tapping screws made of A2 stainless steel.
- Spacer integrated into the fastener to :
 - Control board spacing during periods of expansion and contraction;
 - Automatic and even board spacing during installation.
- UV-resistant.



CONTROLLING CONTRACTION OF AD BOARDS

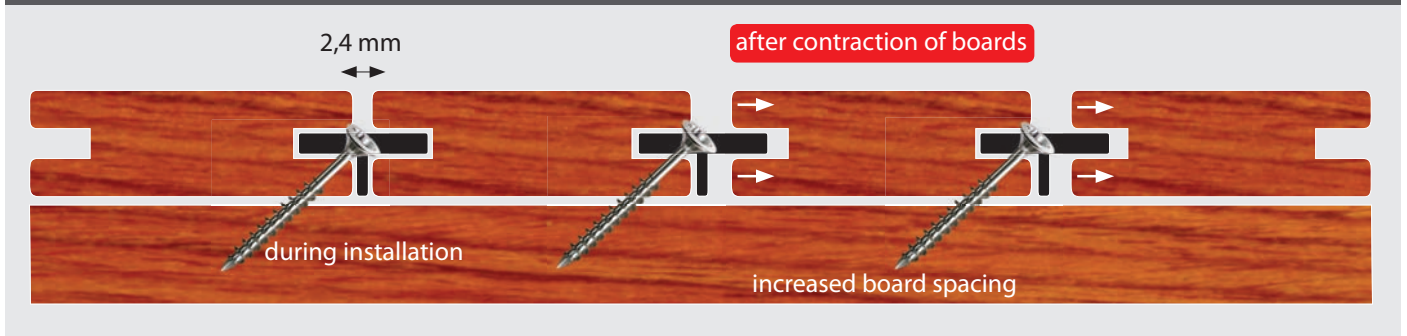

INSTALLING FASTENERS

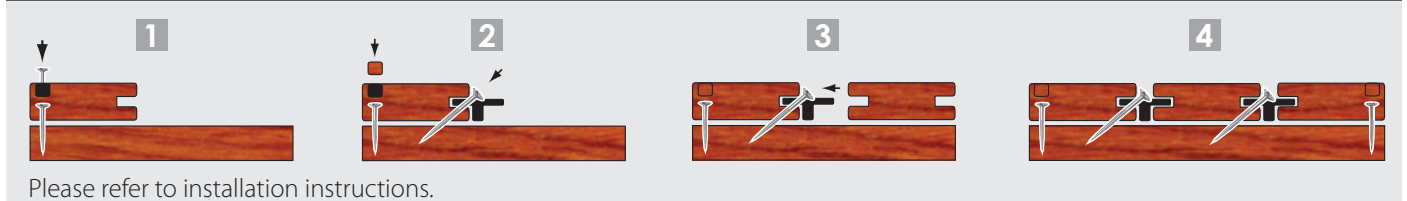

Kit contents



- 185 Hidden Fasteners
- 200 A2 Stainless Steel SPAX® Screws
- 12 Tapered Ipe Plugs
- 1 Torx Driver Bit
- 1 Instructions Sheet


Approximate surfaces covered with a hardWood Clip[™] installation kit

Spacing between joists	Board width		
	90mm	120mm	140mm
45cm	7m²	9m²	11m²
50cm	8m²	10m²	12m²







Extreme™

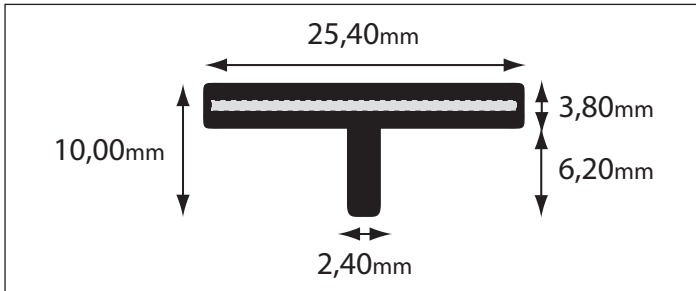

FASTENER TECHNICAL SPECIFICATION		
Material	Strengthening insert	Couleurs
Polypropylene + Fiberglass	22,2 x 22,2mm thickness : 0,9mm A2 stainless steel	

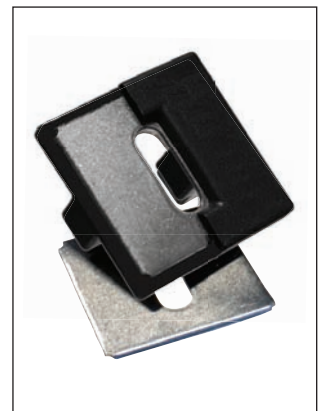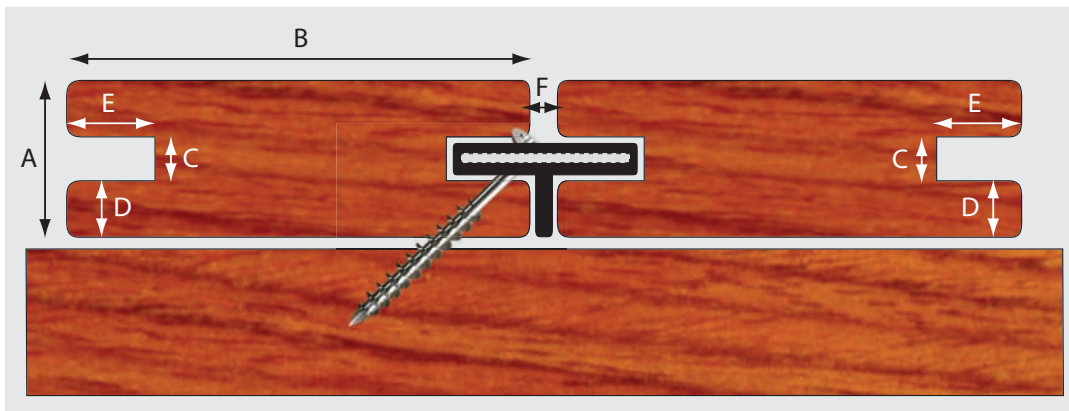

BOARD DIMENSIONS	
Minimum board thickness	Board width
A	B
20mm	90 - 180mm

GROOVE DIMENSIONS		
Thickness of cut	Minimum cutting height	Cutting depth
C	D	E
4mm	8mm*	13mm

BOARD SPACING (during installation)
F
2,4mm**

* **Board reversibility** : Position groove at the centre of the board edge. In this case: $D = (A - C) / 2$.
 For a board that is 21 mm thick: $(21 - 4) / 2 = 8.5$ mm. Ensure that screws are long enough to penetrate the joist.

** **Board spacing** : The spacer integrated into the fastener automatically spaces boards evenly apart.

GROOVE-CUTTING BOARDS

The board edge can be pre-grooved along the full length of the board



or grooved on site using a Lamello® type groove cutter.

